









Use with stop block

Important: coolant flow must be started prior to rotating the spindle to avoid damage of the Orings

Please verify that the weight of the entire tool assembly does not exceed the machine spindle's carrying capability